

Install BMW ISTA P

Requirements

Install Java

[Java 64bit Hors ligne](#)

ISTA P

add "ISTA P Loader 6.1" in "C:\Programme"

Copy ISTA P app file in "C:\Programme" launch ISTA P Loader

Launch ISTA-P Loader and select ISTAP location

Revision #3

Created 15 August 2024 22:53:32 by Admin

Updated 7 October 2024 07:51:48 by Admin